




GREAT PLAINS INDUSTRIES, INC.

Positive Displacement Flowmeters

— GM7 series instruction manual —

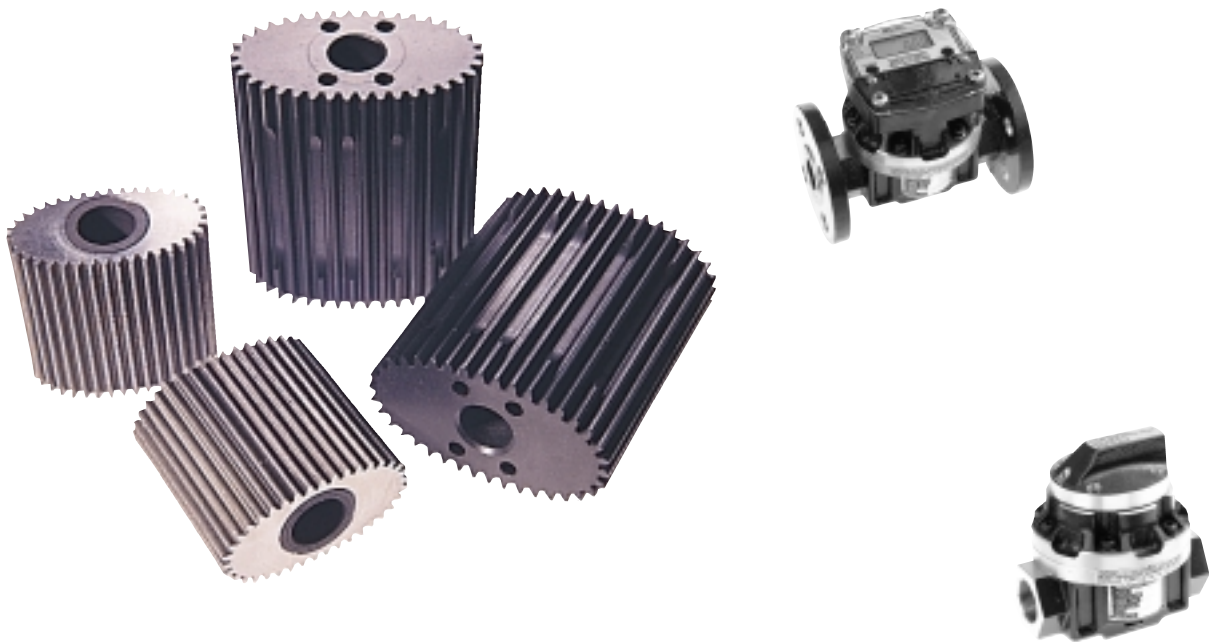

GM7 Pulse • GM7 Standard LCD • GM7 Deluxe LCD • From serial No. CXXXX

MS499G
0899
0001

To the owner

Thank you for purchasing a GPI GM Series Flow Meter. Please take a few minutes to read through this manual before installing and operating your meter. If you have any problems with the meter, refer to the maintenance and trouble shooting sections of this manual.

This manual contains connection and operating instructions for the GM7 Series meters with pulse outputs and liquid crystal displays. For models with deluxe liquid crystal display an additional instruction manual is supplied. [If you need further

assistance, contact your local GPI representative or contact GPI by telephone or fax.]

The GPI GM Series Flow Meter has incorporated the oval rotor principal into its design. This has proven to be a reliable and highly accurate method of measuring flow. Exceptional repeatability and high accuracy over a wide range of fluid viscosities and flow rates are features of the GM Series flow meter design. The low pressure drop and high pressure rating means the GM Series flow meter is suitable for both gravity and

pump (in line) applications.

The GPI GM Series flow meters are available in aluminum, 316 stainless steel, or PPS. Standard rotors are made from PPS (Polyphenylene Sulfide Resins) with optional 316 stainless steel rotors available for either stainless steel or aluminum models. The GM7 Series is available with either;

* Standard Pulse

* Standard LC Display and Pulse

* Deluxe LC Display and Pulse

Important Information



PLEASE READ THIS INFORMATION CAREFULLY BEFORE USE!

Before use, confirm the fluid to be used is compatible with the meter (refer to the GPI fluid compatibility chart), or consult your local GPI distributor for advice.

This meter will handle particle sizes up to 0.25mm/0.011".

To prevent damage from dirt or foreign matter, GPI recommends a Y or Basket type 60 mesh strainer be installed as close as possible to the inlet side of the meter (if required contact GPI for further information).

Note: When a strainer is installed it should be regularly inspected and cleaned. Failure to keep the strainer clean will dramatically effect flow meter performance.

To prevent damage to the meter slowly fill the system with fluid (this will prevent damage caused by air purge).

Note: Failure to do this could damage the meter.

For pump applications, turn off the pump at the **end of each day**.

Maintenance can be carried out to the liquid crystal displays and pulse units without removing or isolating the meter from the line. When maintenance to any other part of the meter is required,

the meter must be isolated and the line pressure reduced.

The reed switch pulse unit can cause inaccurate rate counts when used with high speed counters. It is advised that a debounce circuit be used or alternatively use the hall effect sensor option.

PTB - Deluxe LC Display
EEX1A IIC T6 (PTBnr EX-93.C4033X)

Installation

1] GPI recommends that when setting up pipework for meter installations a bypass line be included in the design. This provides the facility for a meter to be removed for maintenance without interrupting production. (See Fig.1)

2] Use thread sealant on all pipe threads.

3] For pump applications ensure pipe work has the appropriate working pressure rating to match the pressure output of the pump. The maximum working pressures are;

1" PPS BODY
1035kPa/10BAR/150PSI.

4] Install a wire mesh strainer (Y or basket type 60 mesh as close as possible to the inlet side of the meter.

5] Ensure that the meter is installed so that the flow of the liquid is in the direction of the arrows embossed on the meter body.

6] The meter can be installed in any orientation as long as the meter shafts are in a horizontal plane. (Refer to Fig.2 for correct installation) The register assembly may be orientated to suit the individual installation.



Note: Incorrect installation can cause premature wear of meter components.

7] Do not over tighten meter connections.

8] **It is important that after initial installation you fill the line slowly, high speed air purge could cause damage to the rotors.**

9] Test the system for leaks.


10] Check the strainer for swarf or foreign material, after the first 200 litres check periodically, particularly if the flow rate decreases.

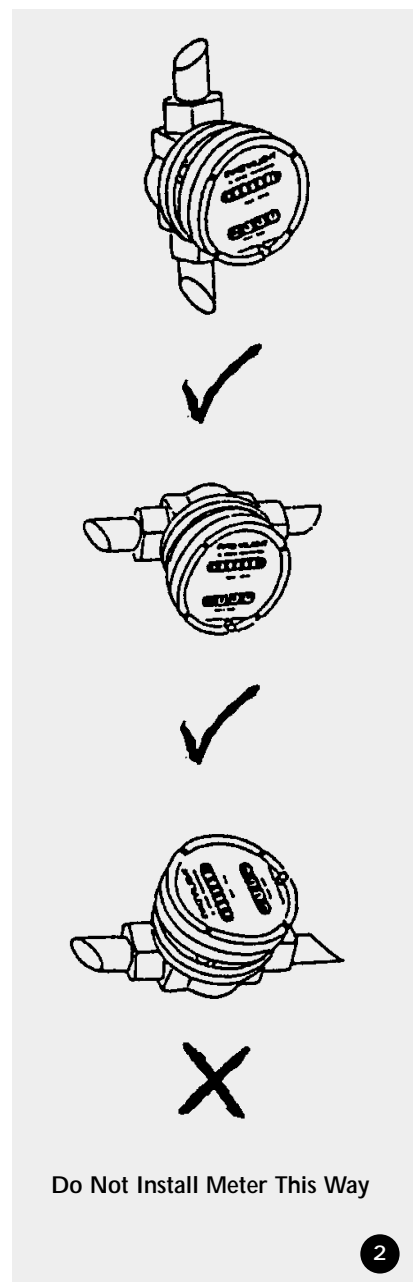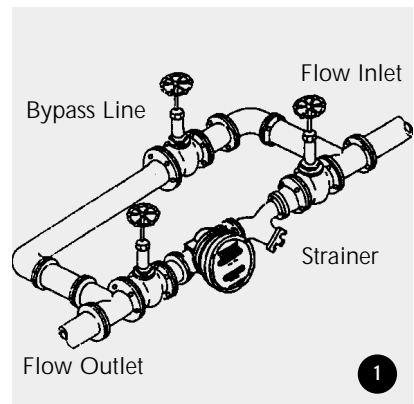

Operation


When fluid passes through the meter, the rotors turn. The magnets which are located in the rotors will pass across the pulser circuit board (containing either Reed switches or Hall Effect

sensors). A signal is received which is then sent by the Pulse Circuit Board (PCB) to the relevant LC display or receiving instrument.

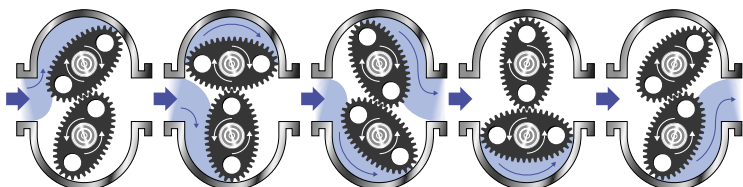


Electrical Connections

Reed Switch Connections for PCB Terminals - refer Fig.3

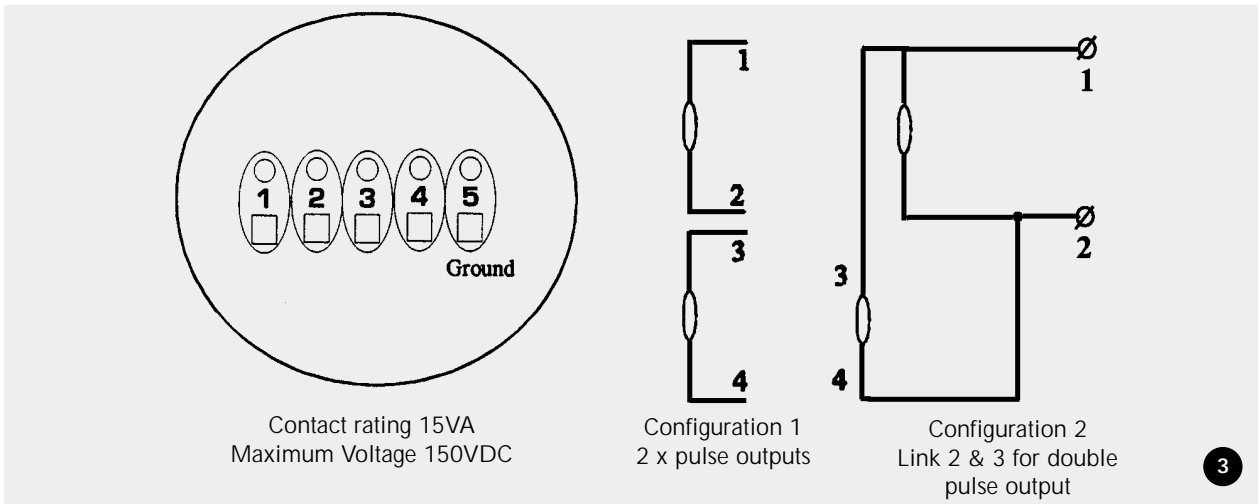

Hall Effect Sensor Connections - refer Fig.4

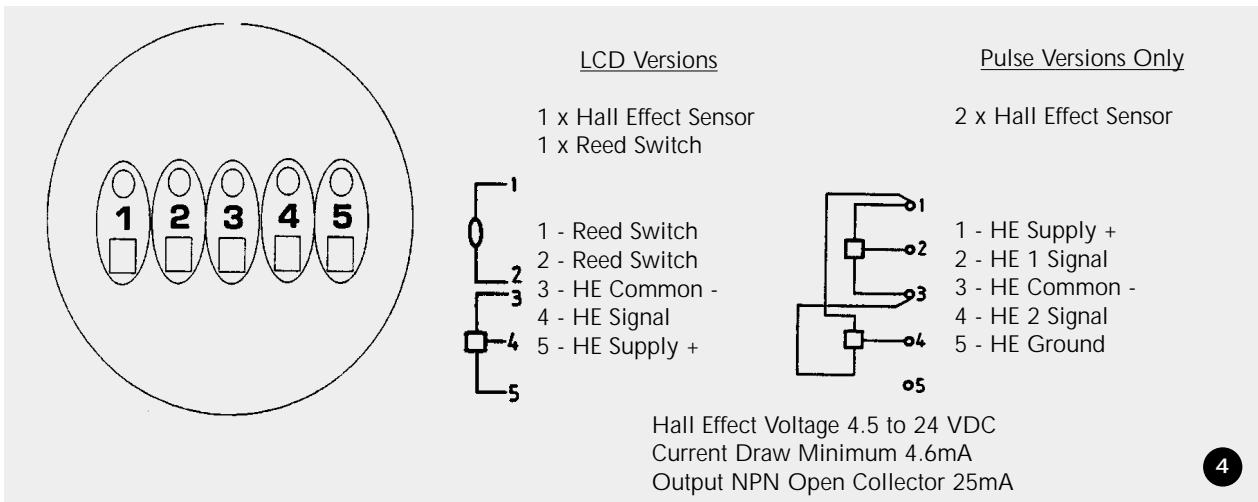

Service Instructions

Disassembly

Ensure that the fluid supply to the meter is disconnected, and the line pressure is released before disassembly, with the exception for repair or maintenance to the LC

Display or PCB where there is no necessity to isolate the meter from the flow. Refer to the exploded parts diagram on pages 7 and 8 for item numbers.

1a] Units with Pulse Caps; Undo the

conduit connector, remove pulse cap (item 9) and remove the wires from the pulse terminal board (item 5).

1b] Standard LC Display; Mark the display orientation with a marking pen, unscrew the four large screws (Item 29) on top of the LC Display. Carefully separate the LC Display from the plastic housing and disconnect the wires from the

pulse terminal block. (See standard LC Display instructions).

1c] Deluxe LC Display; Mark the display orientation with a marking pen, remove the four retaining screws on the display face (Item 16). Lift off the display unit and remove the 9 pin connector at the back of the display unit. (Refer to separate Deluxe LC Display instruction manual).

2] Remove the mounting adaptor plate (item 13) and gasket (Item 8).

3] Loosen the four cap screws (Item 7) and nuts that hold down the meter cap (Item 4), remove the screws and nuts and lift off the cap.

4] Remove the o'ring (Item 2) from the o'ring groove in the meter cap (Item 4).

5] Remove rotors (Item 3).

Reassembly

1] Before reassembling check the condition of the rotors (replace if necessary).

2] Check that the smooth side of the rotors (not the plug side) is facing you when inserting the rotors, the

smooth side of the rotor is the magnet side. There is no difference between rotor one or rotor two.


3] Replace the rotors (Item 3) onto the shafts at 90° to each other (refer Fig. 5) and check their operation by turning either of the rotors. If the rotors are not in mesh correctly or do not move freely, remove one of the rotors and replace correctly at 90° to the other rotor. Re-check the operation of the rotors.

4] Replace the o'ring (Item 2) into groove in the meter cap, if the o'ring has grown or is damaged in any way replace it with a new part.

5] Replace the meter cap. Insert the cap head screws (Item 7) and fix nuts and tighten in the sequence 1, 3, 2, 4

6] The replacement of cables and connectors are a reversal of the disassembly procedure, replace conduit fitting if required. When replacing the Standard LC Display or the Deluxe LC Display, confirm the orientation marks made on disassembly are aligned then screw the register into place.

7] Test the meter by turning the rotors with a finger or by applying very low

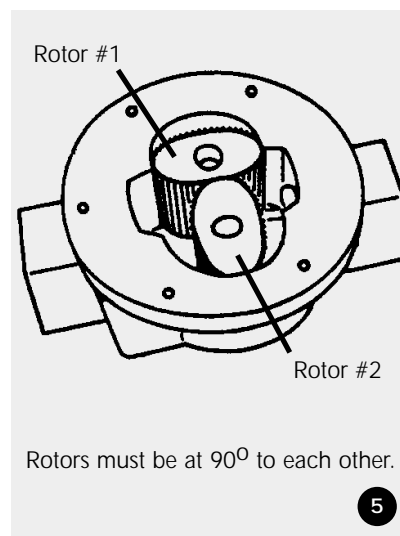

air pressure (no more than a good breath) to one end of the meter, before returning the meter to the line.

Pulse Circuit Board (PCB) Notes:

The PCB (Item 5) is fitted with (A) two reed switches; (B) hall effect sensors; or (C) one reed switch and one hall effect sensor. The PCB board is fastened to the meter cap (Item 4) by two screws and stand off's. All care and caution should be taken when removing or handling the PCB as both the reed switch and hall effect sensor are fragile.

Individual reed switches or hall effect sensors are not available as replacement parts and are only available with the PCB (Item 5).

Standard LC Display

This section of the instruction manual assists you in the operating of the GPI Standard LC Display. Please take a few minutes to acquaint yourself with the information that follows.

Battery Replacement

1] Remove the two large screws (Item 29) and the two small screws (Item 30) from the battery cover plate (Item 28).

2] Remove the battery cover plate



(Item 28) and gasket (Item 27).

3] Remove battery, and clean any corrosion from the battery terminals (to protect terminals from corrosion or condensation coat the terminals with petroleum jelly).

4] Install the new battery.

5] Check gasket (Item 27) for damage (replace if required). Position gasket (Item 27) and cover plate (Item 28) correctly, insert the screws and tighten.

Display Operation

All meter operations are reflected in the readout on the face of the meter. The readout contains three lines of information; refer to Fig. 7.

Note: The calibration is preset and is permanently stored in the meter's computer.

The meter will turn on automatically when the liquid flows through the meter. The meter can also be turned on manually by pressing and releasing the display button.

Turn Off

The meter turns off automatically two minutes after flow stops. When the meter is off, the readout is blank.

Batch Total

The resettable batch total indicates flow during a single use. This total can be reset by holding down the display button for three seconds until zeros appear. The batch total can be found by pressing and releasing the display button

until the bottom line displays "Total 2".

Cumulative Total

The cumulative total is the total of all the liquid measured since the meter's power supply was connected. This total cannot be manually zeroed, but will zero when the battery has been removed, goes dead, or when it reaches the maximum value of 999,999.

The cumulative total can be found by pressing and releasing the display button until the bottom line displays "Total 1 Locked".

Flow Rate

The flow rate is the rate the fluid is flowing through the meter. The flow rate setting can be found by pressing and releasing the display button until the bottom line displays "flow rate".


Propeller

Any time liquid flows through the meter, a small propeller displays.

Battery Replacement

Your meter is powered by a 9 volt lithium battery. (Replacement batteries; Lithium U9VL, Alkaline 522 or MN1604). If the meter's readout should become dim or blank, the battery should be replaced.

When the battery either fails or is disconnected the batch and cumulative totals return to zero. The factory calibration is retained in the meter's computer permanently and will not be affected by battery failure.

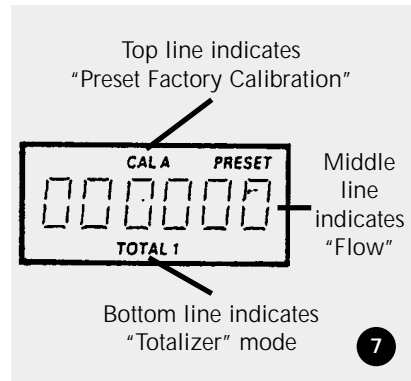

Auxiliary Facilities

Connection of an external 12 volt DC power supply facility;

1] Remove the 4 large screws (Item 29) and remove the register from the coverplate.

2] Disconnect the internal battery.

3] Solder the external power leads to the terminals marked 'Ext 12V' (refer Fig 8) on the registers printed circuit board.


4] Re-assemble the register onto the coverplate, replace the 4 screws (Item 29) and screw firmly together.

Connection of external pulse output

1] Remove the 4 large screws (Item 30) and remove the register coverplate.

2] Connect external signal lead. (Refer Fig. 8)


Pulse output and Ext Power are the connections located on the interface PCB, to use this output a 1K resistor will need to be soldered between the + voltage of the external power input and the + of the pulse output. Pulse signal represents the output cabling to the receiving instrument.

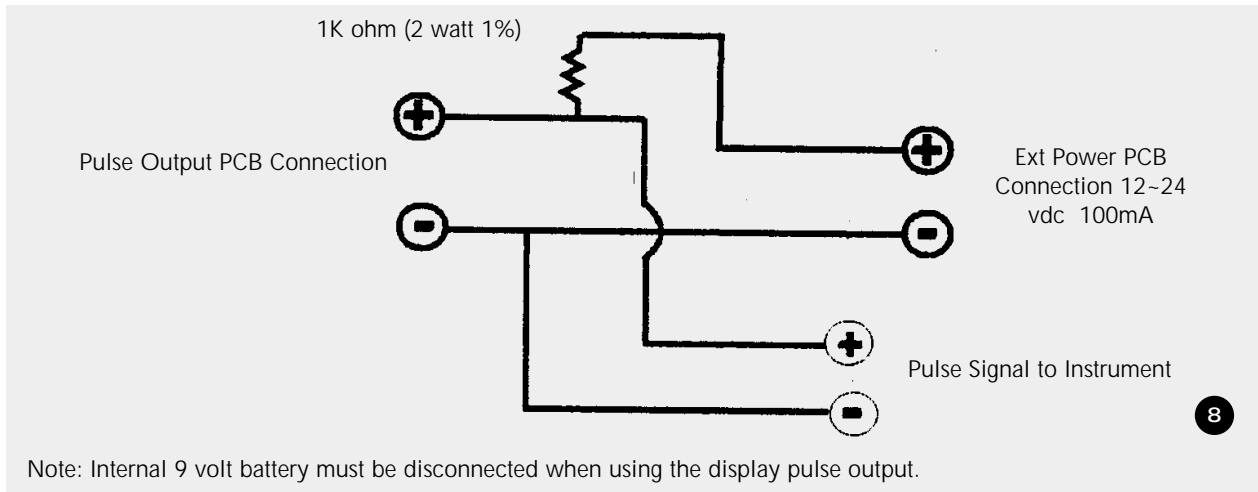

Meter Trouble Shooting

TROUBLE SHOOTING GUIDE		
TROUBLE	CAUSE	REMEDY
Fluid will not flow through meter	<ul style="list-style-type: none"> a] Foreign matter blocking rotors b] Line strainer blocked c] Damaged rotors d] Meter connections over tightened e] Fluid is too viscous 	<ul style="list-style-type: none"> a] Dismantle meter, clean rotors (Strainer must be fitted in line) b] Clean strainer c] Replace rotors (Strainer must be fitted in line) d] Re-adjust connections e] See specifications for maximum viscosity
Reduced flow through the meter	<ul style="list-style-type: none"> a] Strainer is partially blocked b] Fluid is too viscous 	<ul style="list-style-type: none"> a] Clean strainer b] See specifications for maximum viscosity
Meter reading inaccurate	<ul style="list-style-type: none"> a] Fluid flow rate is too high or too low b] Fluid is too viscous c] Excess wear caused by incorrect installation 	<ul style="list-style-type: none"> a] See "specifications" for minimum and maximum flow rates b] Bleed air from system c] Check meter body and rotors. Replace as required. Refer to installation instructions
Meter not giving a pulse signal	<ul style="list-style-type: none"> a] Faulty hall effect sensor b] Faulty reed switch c] Magnets failed 	<ul style="list-style-type: none"> a] Replace PCB Board b] Replace PCB Board c] Replace rotors
LCD Register not working	<ul style="list-style-type: none"> a] Battery not connected properly b] Battery flat c] Faulty wiring connections d] Faulty LC display e] Faulty connection from LC display to Pulse PCB 	<ul style="list-style-type: none"> a] Check battery connections b] Replace battery c] Check wiring for loose or faulty connections d] Replace LC display e] Check wiring connections

Meter Parts Listing

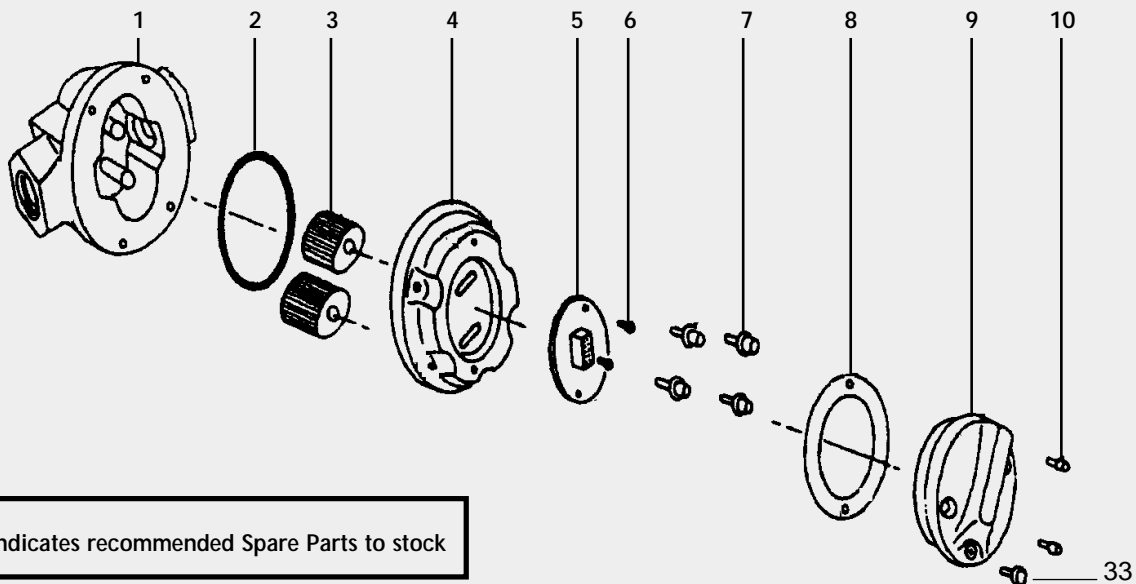


Key:
u Indicates recommended Spare Parts to stock

33

Item No.	No. Off.	Rec. Parts	Part or Set (Order from this column only)	Part Description
1	1		MS351B	Meter Body 1" BSP (PPS) & St St Shafts
1	1		MS351N	Meter Body 1" NPT (PPS) & St St Shafts
1	1		MS352B	Meter Body 1" BSP (PPS) & Hastalloy Shafts
1	1		MS352N	Meter Body 1" NPT (PPS) & Hastalloy Shafts
2	1	*	BS235	"O" Ring (NBR)
2	1	*	BS235E	"O" Ring (EPDM)
2	1	*	BS235TE	"O" Ring (Teflon) Encapsulated
2	1	*	BS235V	"O" Ring (Viton)
3	2	*	MS370S	Rotors PPS (Polyphenylene Sulfide Resins)
3	2	*	MS370TS	High Temperature Rotors (PPS)
3	2	*	MS370HS	High Viscosity Rotors (PPS)
3	2	*	MS370HTS	HighViscosity/High Temperature Rotors (PPS)
4	1		MS405R	Meter Cap (PPS)
5	1	*	MS368-R	PCB (Standard Reed Switch)
5	1	*	MS344-HE	PCB (Hall Effect Sensor)
5	1		MS368-R/HE	PCB (1 Reed Switch & 1 Hall Effect Sensor)
6	2		MS284S	PCB Board Screws
7	4	*	MS350S	Meter Cap Screws (Stainless Steel)
8	1	*	MS340	Pulser Cap Gasket
9	1		MS406R	Pulser Cap (PPS) 16mm Conduit Thread
9	1		MS406R-N	Pulser Cap (PPS) 1/2" NPT Thread
10	2		MS347S	Pulser Cap Screw (Stainless Steel)
11	1		MS37	Warning Label (Not Shown)
12	1		Specify plate details	Legend Plate (Not Shown) inc. Hammer Screws
33	1		MS111	Earthing Screw
34	4		MS497S	Nut - Stainless Steel - Not Shown, recessed in body

Display Parts Listing

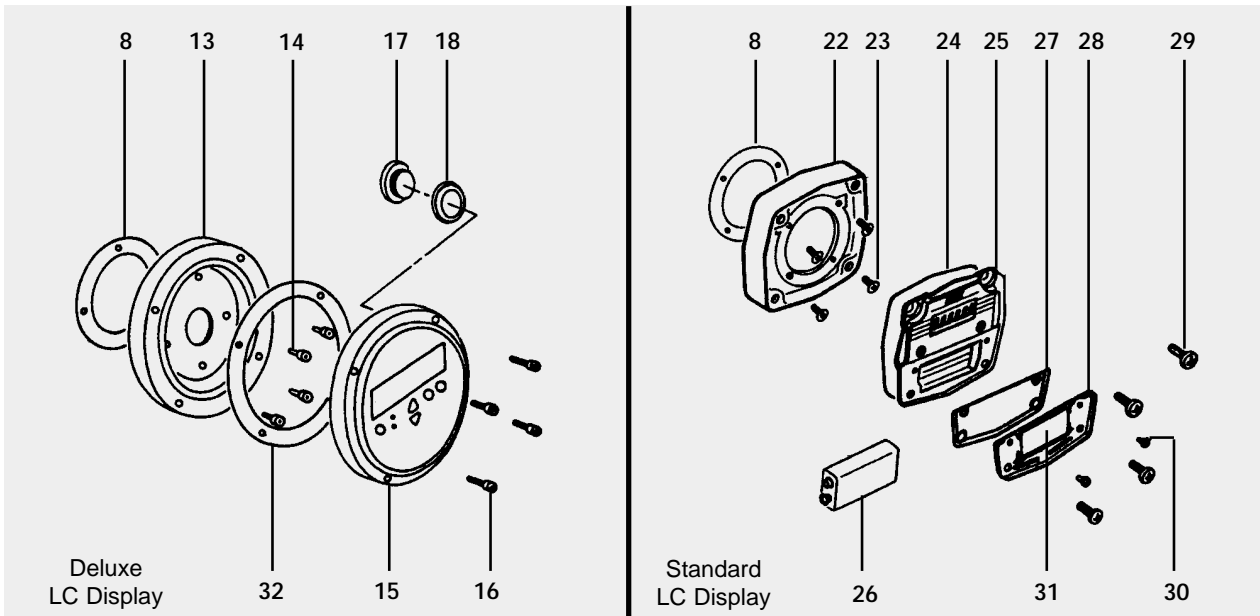


Item No.	No. Off.	Rec. Parts	Part or Set (Order from this column only)	Part Description
13	1		MS500S	Deluxe LCD Display (Complete)
14	4	*	MS349	Mounting Adaptor Plate
15	1	*	MS117S	Adaptor Screws
16	4	*	MS69	LC Display Unit
17	1	*	MS118S	LC Display Mounting Screws
18	1	*	MS127	Battery Retaining Screw
19	1	*	MS126	Battery (Standard) CR2040
20	1	*	MS68	Connector and Cable (Not Shown)
21	1	*	MS87	PTB Approval Label (Not Shown)
			MS128	Extended Life Battery 2/3 AA (Not Shown)
32	1	*	MS307	NOTE: Not Suitable for Intrinsic use Gasket
22	1		MS505S	Standard LC Display (Complete)
23	4	*	MS348	Mounting Adaptor Plate
24	1	*	MS203S	Adaptor Screws
25	1	*	BS045	"O" Ring
26	1	*	MS205	LC Display
27	1	*	MS274	9 Volt Battery
28	1	*	MS184S (Inc. MS184B)	Battery Gasket
29	1	*	MS184S (Inc. MS184A)	Battery Cover
30	4	*	MS206S	Register Screws
31	2	*	MS182S	Battery Cover Plate Screws
	1		Specify Details	Battery Cover Label

Meter Specifications


Meter Type	Pulse	Pulse with Standard LC Display	Pulse with Deluxe LC Display
Flow Ranges (Litres per minute/US Gallons per minute)			
Above 5 Centipoise	3 to 80 / 0.8 to 21	3 to 80 / 0.8 to 21	3 to 80 / 0.8 to 21
Below 5 Centipoise	8 to 70 / 2 to 18.5	8 to 70 / 2 to 18.5	8 to 70 / 2 to 18.5
Accuracy of Reading	+/- 0.5%	+/- 0.5%	+/- 0.5%
Maximum Viscosity (Standard Rotors)	1000 Centipoise	1000 Centipoise	1000 Centipoise
Maximum Operating Pressure	1000 kPa/ 150 PSI/ 10 BAR	1000 kPa/ 150 PSI/ 10 BAR	1000 kPa/ 150 PSI/10 BAR
Maximum Operating Temperature	80°C/ 176°F	80°C/ 176°F	80°C/ 176°F
Pulse Type	Dual Reed Switches or Hall Effect Sensor or combination HE Sensor/Reed Switch	Dual Reed Switches or Hall Effect Sensor or combination HE Sensor/Reed Switch	Dual Reed Switches or Hall Effect Sensor or combination HE Sensor/Reed Switch
Pulses Per Litre/US Gallon	52 or 104/197 or 394	52 / 197	52/ 197

Meter Dimensions


GM7 Pulse Meter Dimensions

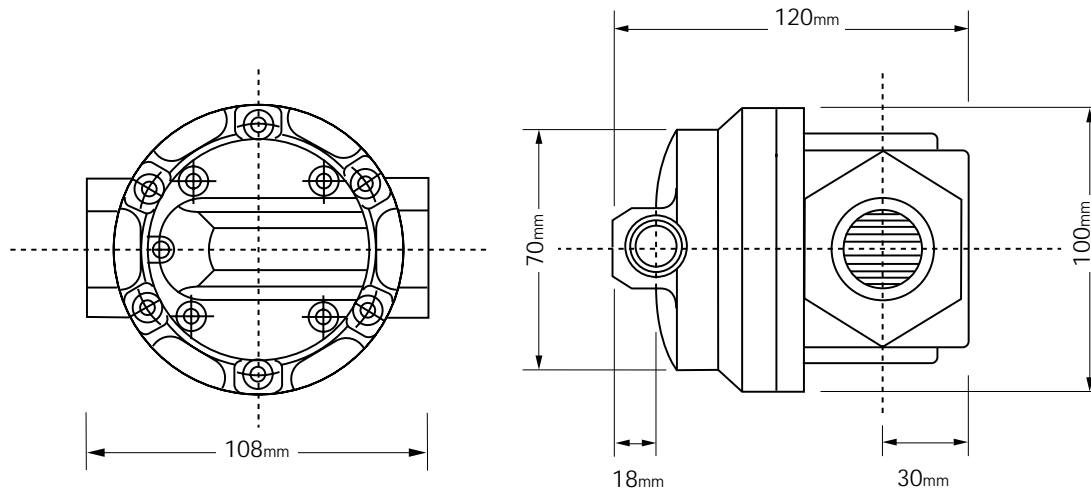

GM7 Pulse Meter with Standard LC Display

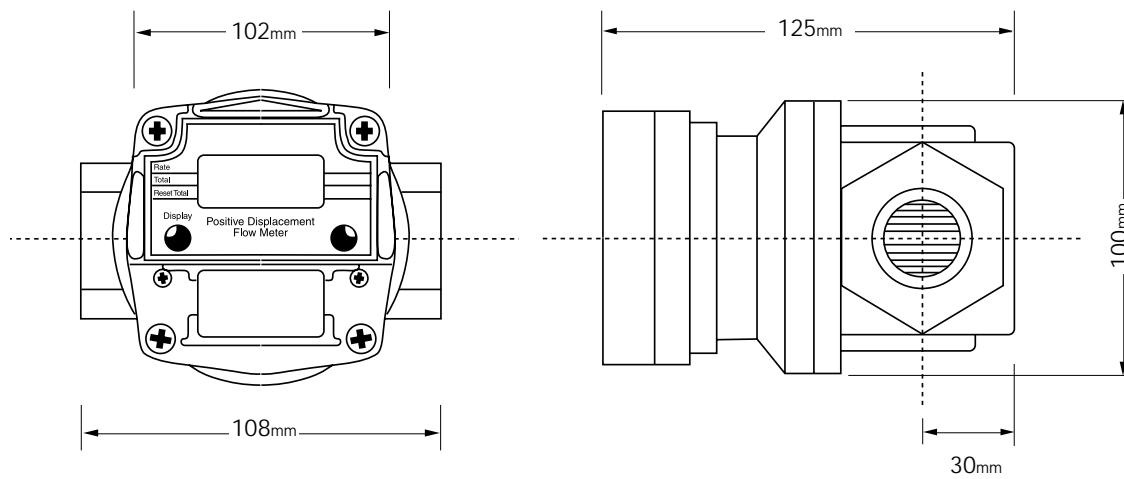

GM7 Pulse Meter with Deluxe LC Display

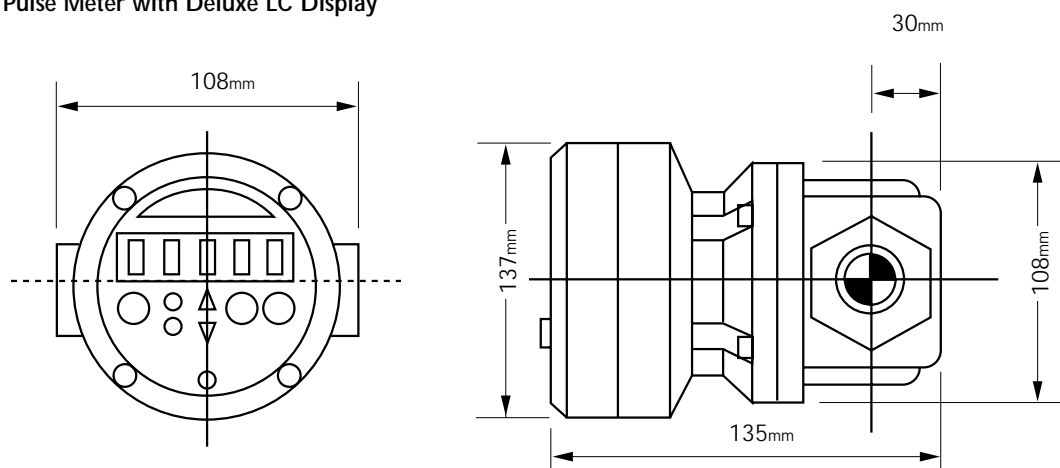

Warranty

Great Plains Industries, Inc. Limited Warranty Policy

Great Plains Industries, Inc., 5252 East 36th Street North, Wichita, Kansas USA 67220-3205, hereby provides a limited one year warranty against defects in material and workmanship on all products manufactured by Great Plains Industries, Inc. This warranty shall extend to the purchaser of this product and to any person to whom such product is transferred during the warranty period.

The warranty period shall begin on the date of the original new equipment purchase. Warrantor's obligation hereunder shall be limited to repairing defective workmanship or replacing or repairing any defective part or parts. This warranty shall not apply if:

- a.) The product has been altered or modified outside the warrantor's duly appointed representative;
- b.) The product has been subjected to neglect, misuse, abuse or damage or has been installed or operated other than in accordance with the manufacturer's operating instructions.

To make a claim against this warranty, notice of claim must be given in writing to the company at its address below no later than 30 days after the expiration of the warranty period. Such notice shall identify the defect in the product. The company shall, within 14 days of receipt of such notice, notify the customer to either send the product, transportation prepaid, to the company at its office in Wichita, Kansas, or to a duly authorized service center. The company shall perform all obligations imposed on it by the terms of this warranty within 60 days of receipt of the defective product.

GREAT PLAINS INDUSTRIES, INC. EXCLUDES LIABILITY UNDER THIS WARRANTY FOR DIRECT, INDIRECT, INCIDENTAL AND CONSEQUENTIAL DAMAGES INCURRED IN THE USE OR LOSS OF USE IF THE PRODUCT WARRANTED HEREUNDER.

The company herewith expressly disclaims any warranty of merchantability or fitness for any particular purpose other than for which it was designed.

This warranty gives you specific rights and you may also have other rights which vary from U.S. state to U.S. state.

NOTE: In compliance with MAGNUSON MOSS CONSUMER WARRANTY ACT - Part 702 (governs the resale availability of the warranty terms).



5252 East 36th Street North
Wichita, KS USA 67220-3205
TEL: 316-686-7361
FAX: 316-686-6746
